


KitchenAid®

LATCH AND VENT PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

30" ELECTRIC
BUILT-IN
DOUBLE
OVEN

Self Clean Upper
Standard Clean
Lower

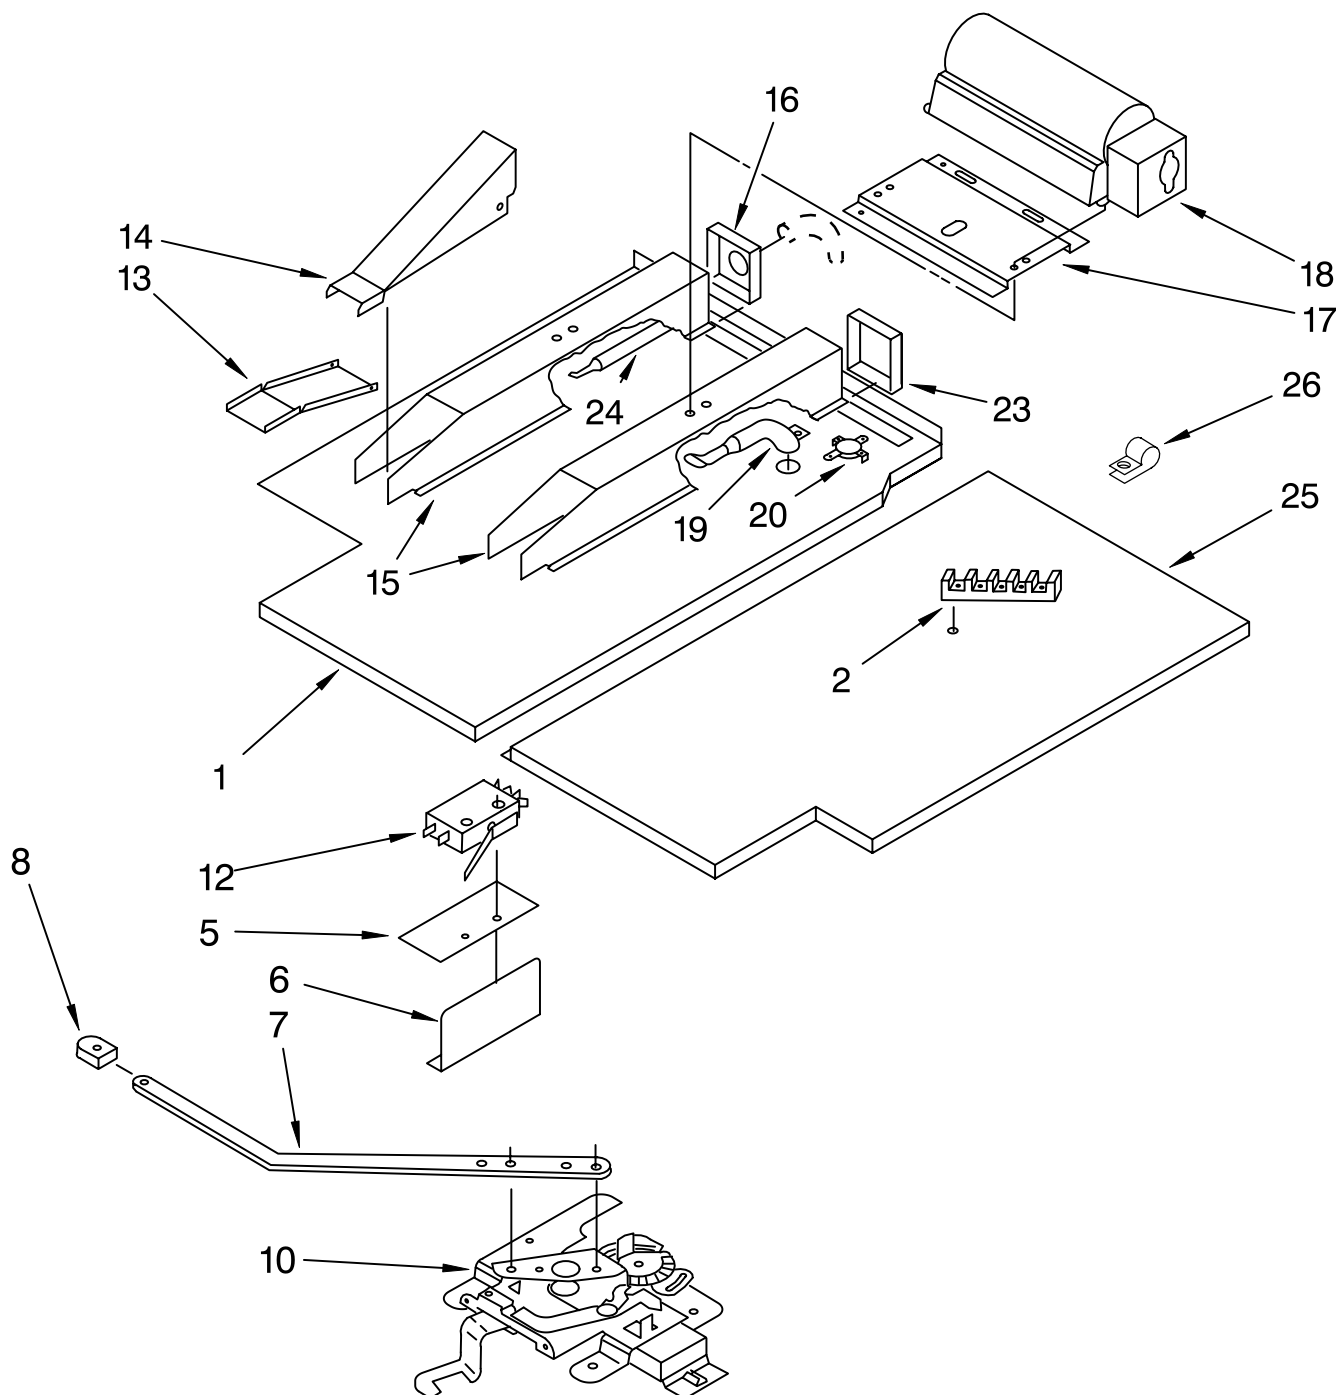

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH AND VENT PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	3183949	Baffle, Vent
	3148107	Screw (6)
2	258076	Block, Terminal
	112432	Nut
	308043	Screw (2)
5	309245	Insulator, Switch
	98106	Screw
6	313035	Shield, Latch
	309258	Screw
7	3184002	Handle, Latch
	308422	Screw
8	3184039	Knob, Latch Handle
	3183294	Screw
10	3187081	Latch Mechanism
12	3178668	Switch, Latch
13	3183954	Nozzel, Vent
		Bottom (2)
14	3183955	Nozzel, Vent
		Top (2)
15	3184078	Box, Vent (2)
	3179116	Screw
	4173231	Screw
16	3183965	End, Vent Box
17	3183533	Bracket, Mounting
		Fan
	3177991	Screw (4)
18	3183720	Blower, Fan
19	3183792	Tube, Vent
	343641	Screw
20	3149650	SPST Thermostat
23	3183964	End, Vent Box
24	3183793	Tube, Vent
		Lower Oven
25	3183948	Baffle, Vent Mtg.
	3148107	Screw (14)
26	3183532	Clamp, Tube
	3148107	Screw


FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

LIT3186506	Tech Sheet
LIT3182137	Installation
	Instructions
LIT3188198	Use & Care Guide

UPPER OVEN PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

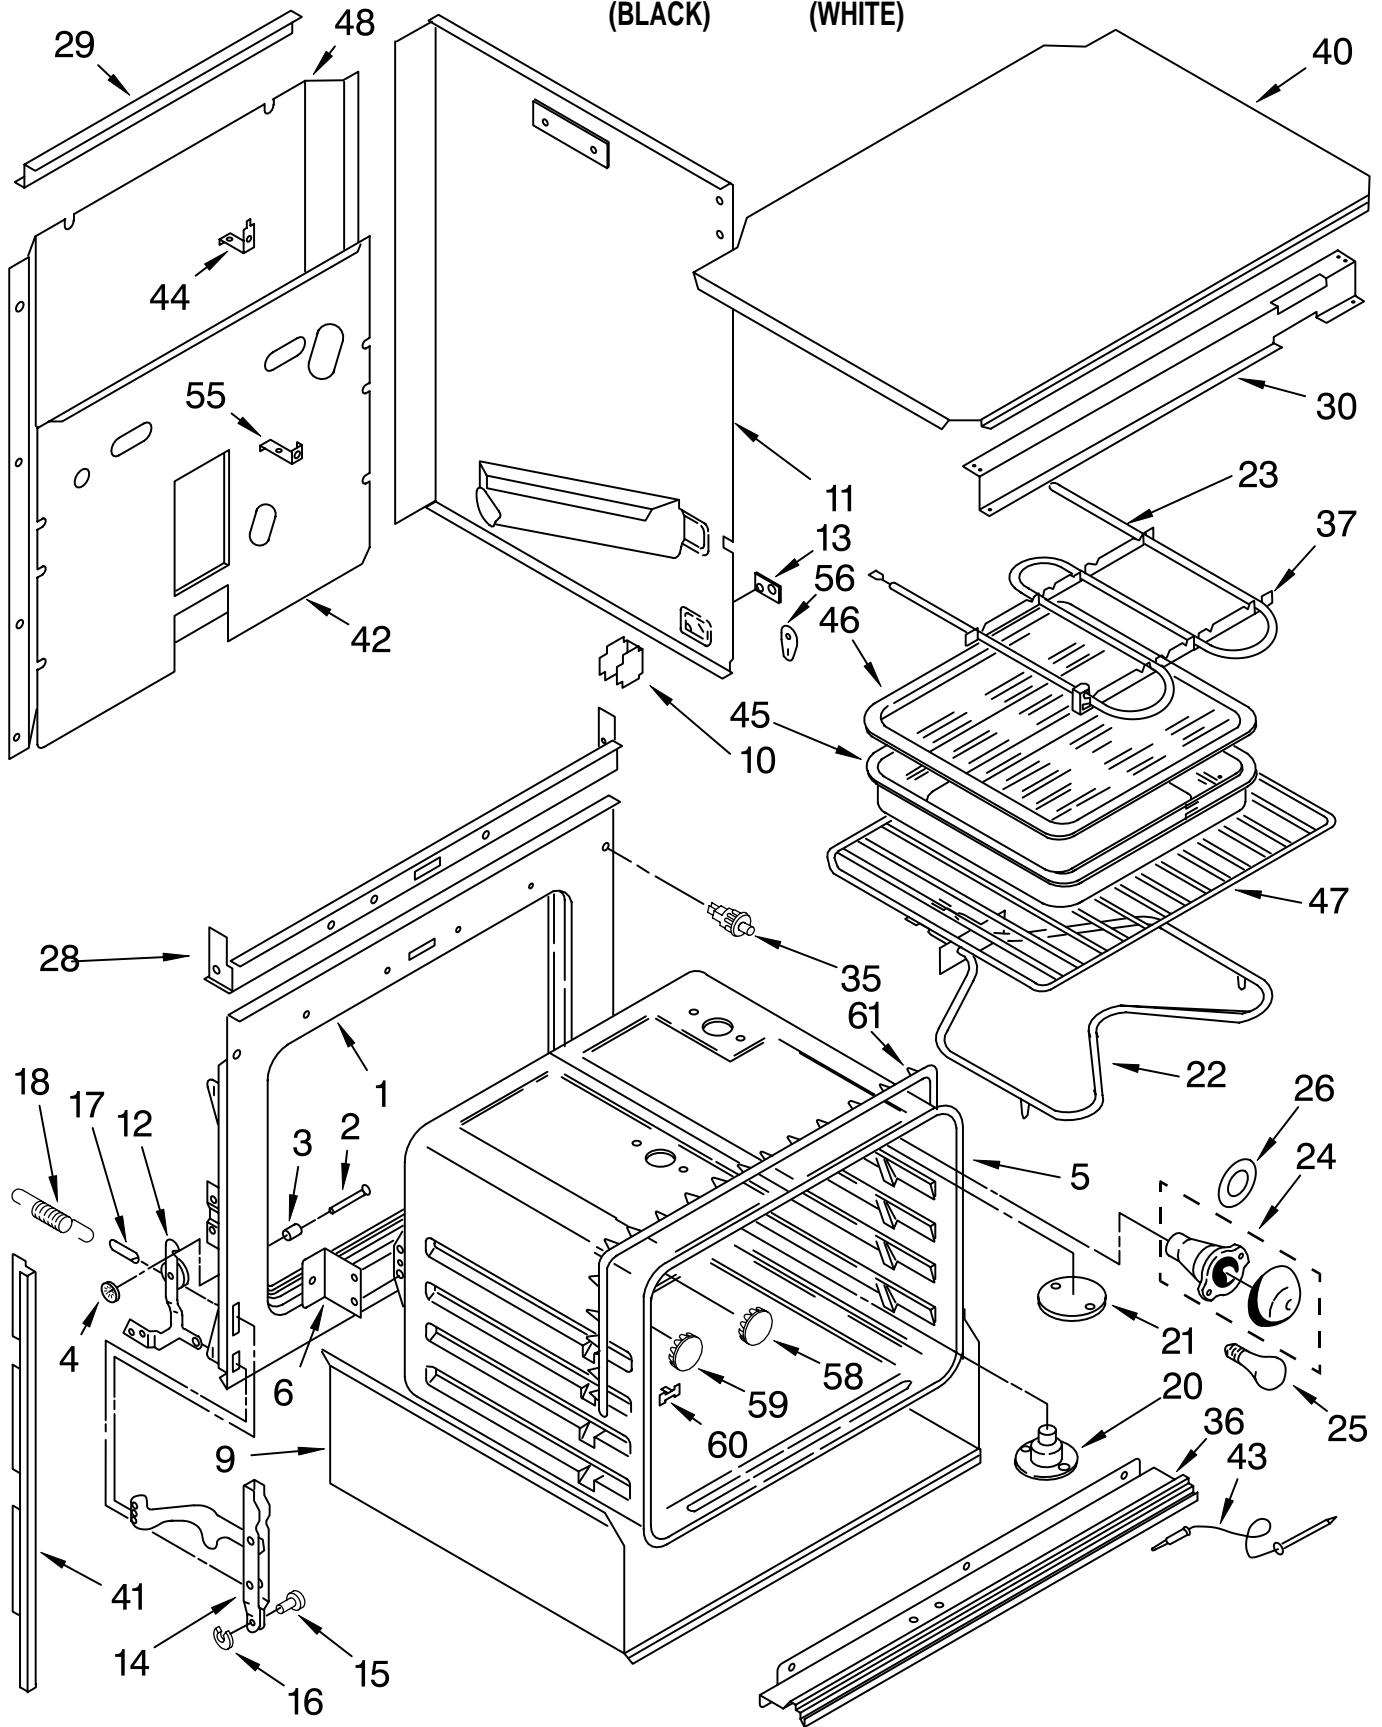

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	3186975	Frame Front
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	3182032	Oven 30"
	311056	Screw (3)
6	310713	Bracket, Oven Mounting (2)
	343641	Screw (6)
9	3185944	Insulation Tray
	3148107	Screw (2)
10	311774	Support, Side Wrapper (4)
	3148107	Screw (4)
11		Side Wrapper
	3185953	Right Side
	3185956	Left Side
	3148107	Screw,
12		Hinge Ear
	3185662	Right Side
	3185663	Left Side
13	310659	Plate (2) (Side Panel)
	308544	Screw (4)
14	3185664	Channel Arm (2)
15	307986	Pin, Hinge (2)
16	307594	Retainer Ring (2)

Illus. No.	Part No.	DESCRIPTION
17	308125	Anchor Spring (2)
18	308126	Spring, Oven Door (2)
20	3186933	Eliminator, Smoke
21	310662	Plate Cover
	3148107	Screw (2)
22	661416	Unit, Bake
	3150532	Screw (4)
23	3182451	Unit, Broil
24	3150505	Oven Light Assy.
25	311255	Bulb, Oven Light
26	3184533	Gasket, Light
28	3183796	Baffle, Top
		Insulation
	3148107	Screw (2)
29	3182585	Bracket, Support Control Frame
30	3182585	Bracket, Mounting Control, Frame
	312713	Screw
35	310345	Switch, Door
36		Vent, Center Trim
	3188144	Black
	3188145	White
	309133	Screw
37	3180694	Bracket, Element
	3150532	Screw (2)
40	3184099	Cover, Top
	3148107	Screw (4)
41		Side Trim L.H.
	3149737	Black Model
	3187909	White Model
		Side Trim R.H.
	3149738	Black Model
	3187903	White Model

Illus. No.	Part No.	DESCRIPTION
42	3182052	Panel, Back
	3148107	Screw (16)
43	3148440	Sensor, Heat
	3148107	Screw (2)
44	311582	Stand Off
45	3147845	Pan, Broiler
46	3147563	Grid, Broiler
47	3185641	Rack, Straight
	3185640	Rack, Oven Offset
48	3185961	Cover, Rear
	3148107	Screw (9)
55	309102	Bracket Stand Off
	3148107	Screw
56	310662	Coverplate
58	3182814	Button, Plug
59	3185086	Button, Plug
60	3169107	Plug, Oven
61	3185197	Seal, Door


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

310433	Insulation, Wrap
310435	Insulation, Oven
3149328	Insulation, Top

LOWER OVEN PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

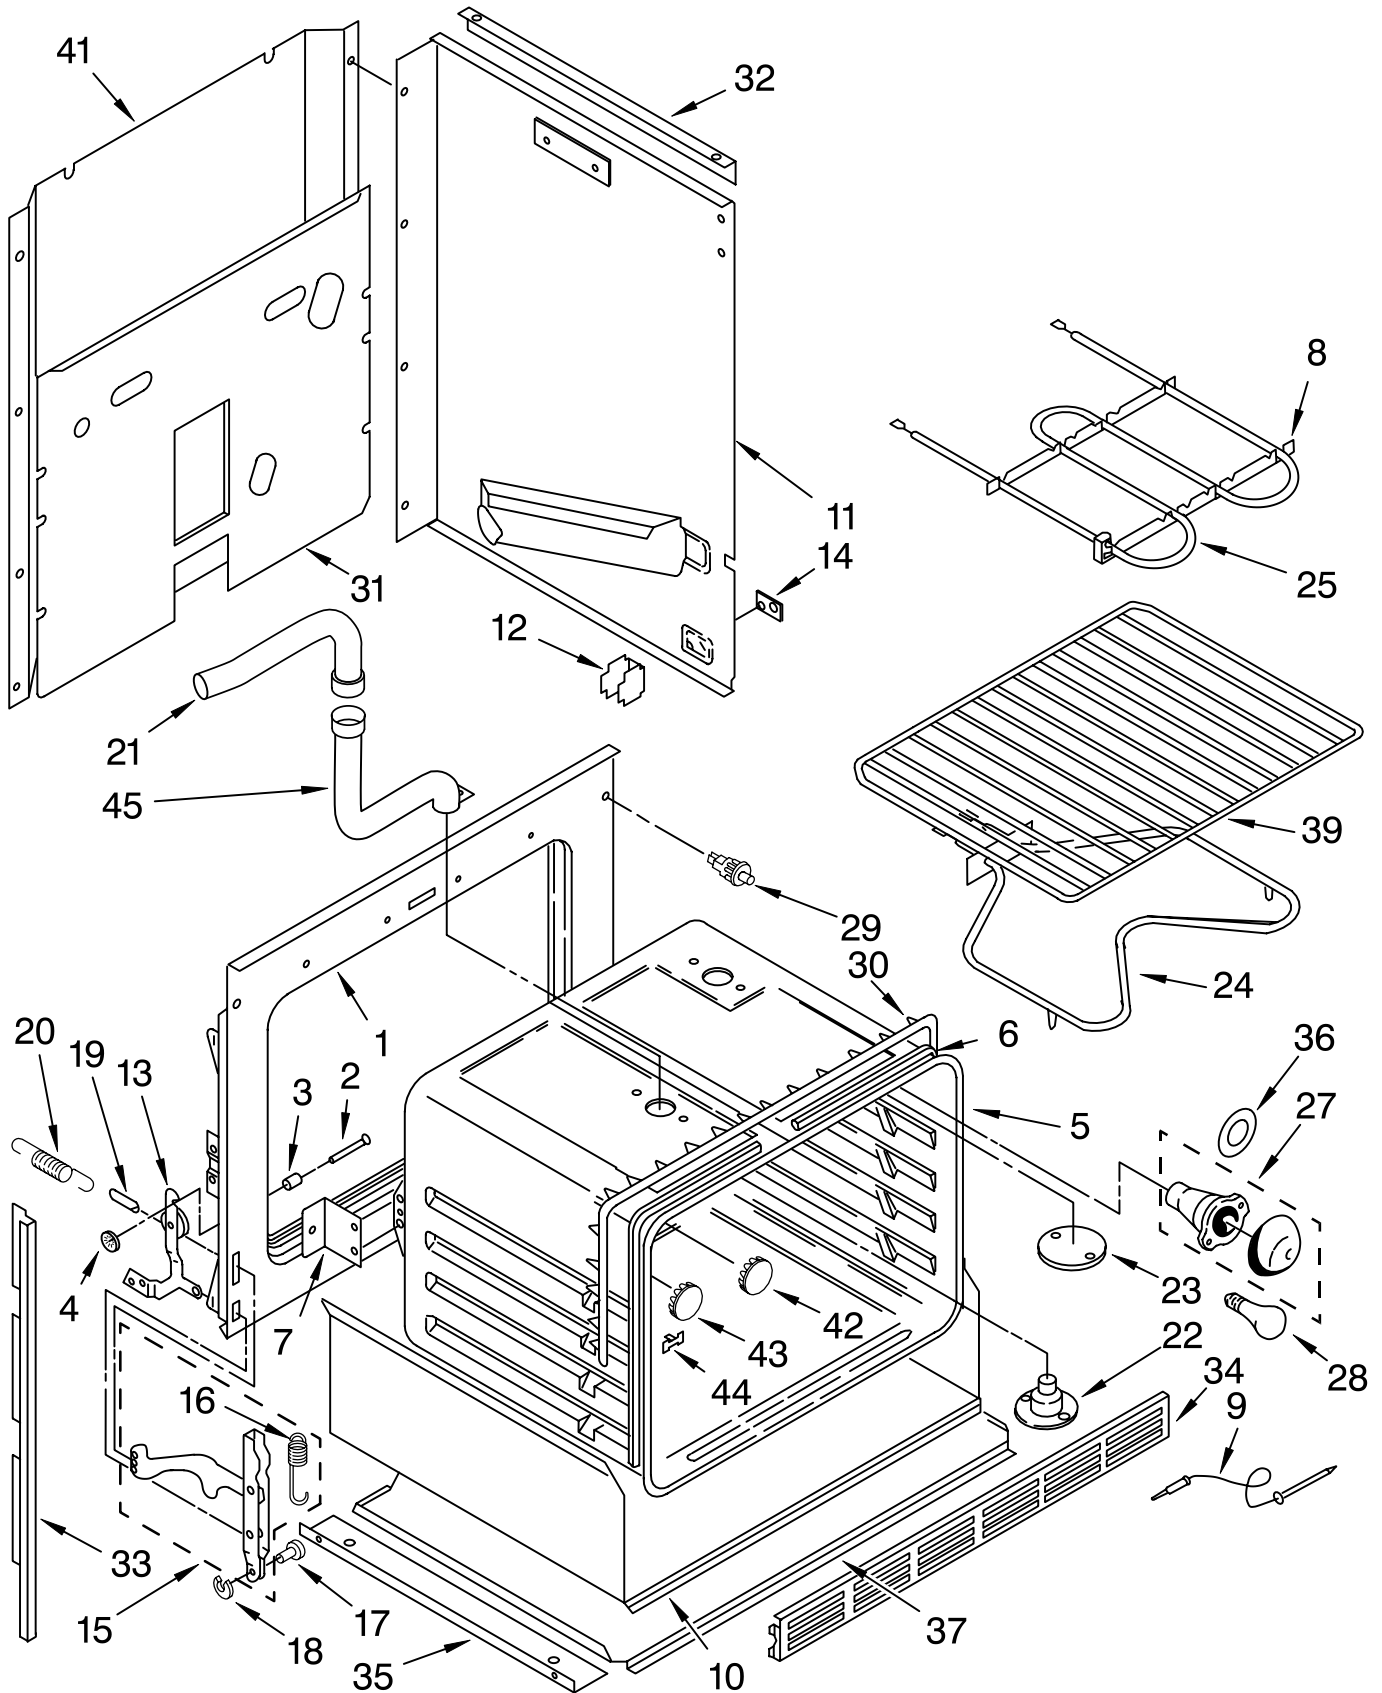

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3186977	Frame, Front
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	3182032	Oven 30"
		Standard Clean
	311056	Screw (3)
6	3169283	Heat Seal
7	310713	Bracket, Oven Mounting (2)
8	3180694	Bracket, Element
	3150532	Screw (2)
9	3148440	Sensor, Heat
	3148107	Screw (2)
10	3185944	Insulation Tray
	3148107	Screw (2)
11		Side Wrapper
	3185955	Right Side
	3185958	Left Side
12	311774	Support, Side Wrapper (4)
	3148107	Screw (2)
13		Hinge Ear
	3185662	Right Side
	3185663	Left Side
14	310659	Plate, Side Panel (2)
	308544	Screw (4)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

15	3185665	Channel Arm (2)
16	311092	Spring, Door Stop (2)
17	307986	Pin Hinge
18	307594	Retainer, Ring
19	311897	Anchor, Spring (2)
20	308127	Spring, Oven Door (2)
	343641	Screw
21	3182161	Tube, Lower Vent
	343641	Screw (6)
22	310840	Eliminator, Smoke
	3148107	Screw (2)
23	310662	Plate Cover
	3148107	Screw (2)
24	661416	Unit, Bake
25	3182451	Unit, Broil
	3150532	Screw (4)
27	3150505	Oven Light Assy.
28	311255	Bulb, Oven Light
29	310345	Switch, Door
30	3185197	Seal, Door
31	3182052	Panel, Back
	3148107	Screw (6)
32	255095	Angle Support (2)
	3148107	Screw (6)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

33		Side Trim L.H.
	3149236	Black Model
	3187912	White Model
		Side Trim R.H.
	3149237	Black Model
	3187906	White Model
	3148107	Screw (14)
34		Grill, Bottom
	3150349	Black
	309029	Screw (3)
	3150350	White
	338156	Screw (3)
35	311592	Angle Support (2)
36	3184533	Gasket, Light
37	3185945	Cover, Bottom
	3148107	Screw (4)
39	3185641	Rack, Straight
	3185640	Rack, Offset
41	3185959	Cover, Rear
	3148107	Screw (11)
42	3182814	Button, Plug
43	3185086	Button, Plug
44	3169107	Plug, Oven
45	3182159	Tube, Vent
	343641	Screw


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

310433	Insulation, Wrap
310435	Insulation, Oven

LOWER OVEN DOOR PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

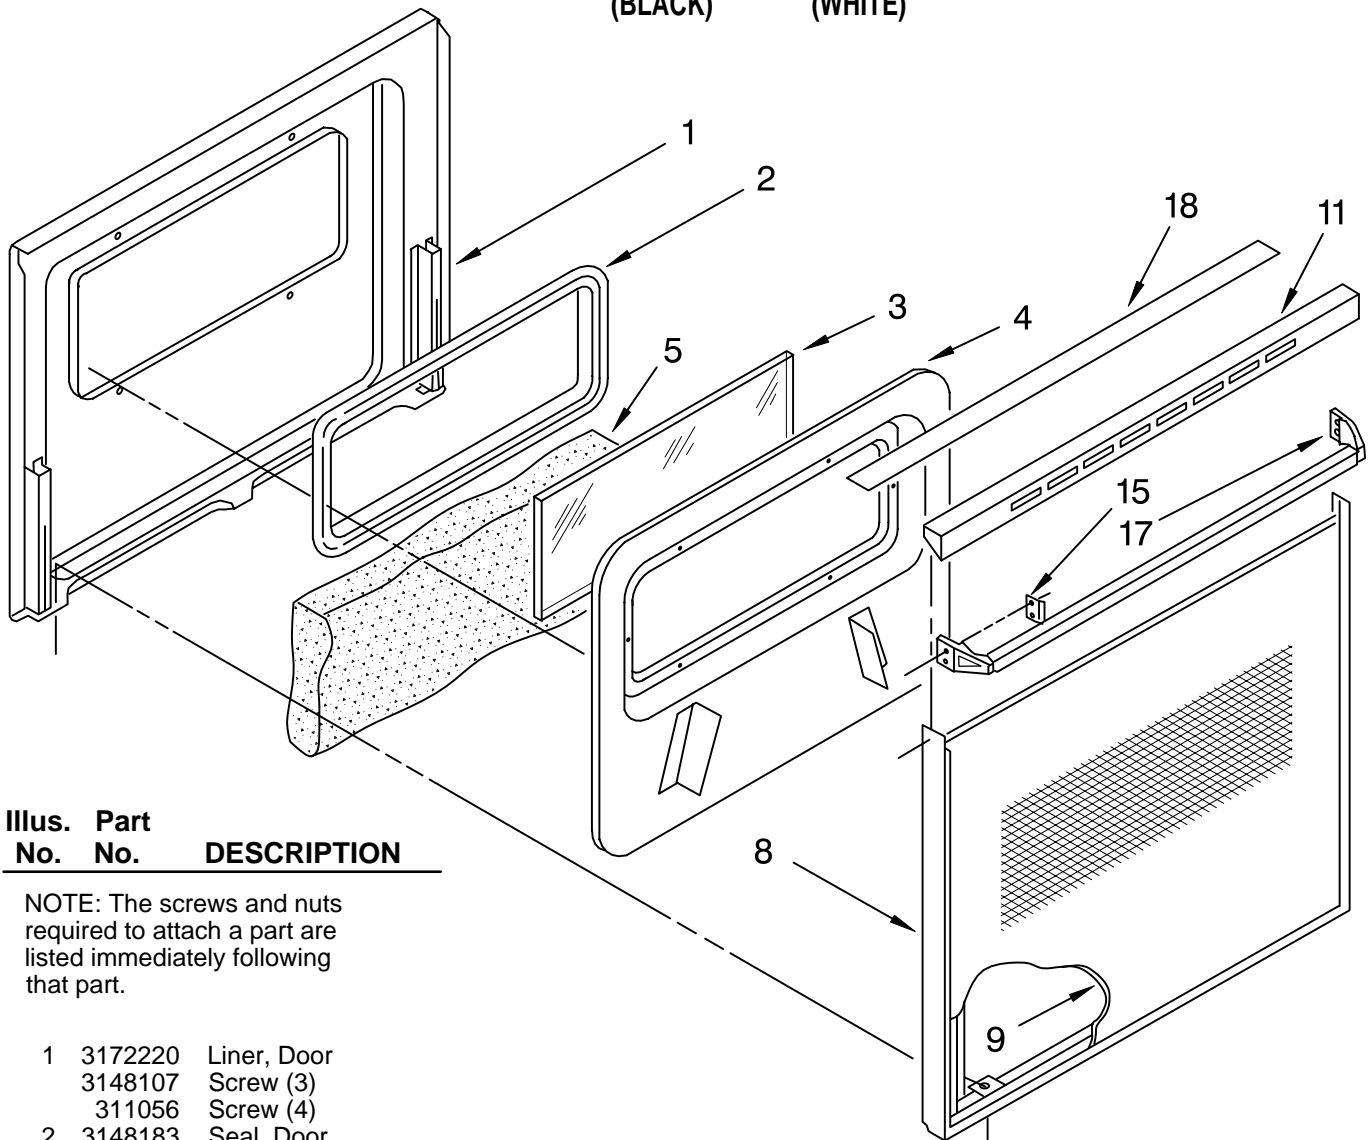

Illus. Part

No. No. DESCRIPTION


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172220	Liner, Door
	3148107	Screw (3)
	311056	Screw (4)
2	3148183	Seal, Door
3	3169202	Glass, Inner
4	3148287	Retainer, Insulation
	3185647	Screw (6)
5	3147954	Insulation
8		Frame, Door
	3171530	Black Model
	3187920	White Model
9		Glass, Panel
	3188052	Black
	3188050	White
11		Top, Door Frame
	3148223	Black Model
	3149355	White Model
15	3148282	Clip (2)
	3185918	Screw
17		Handle, Oven Door
	3186524	Black
	3186525	White
	3149333	Screw (5)
	3149253	Screw, Handle (4)
18		Cap, Top
	3181366	Black Model
	3181367	White Model

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN DOOR PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

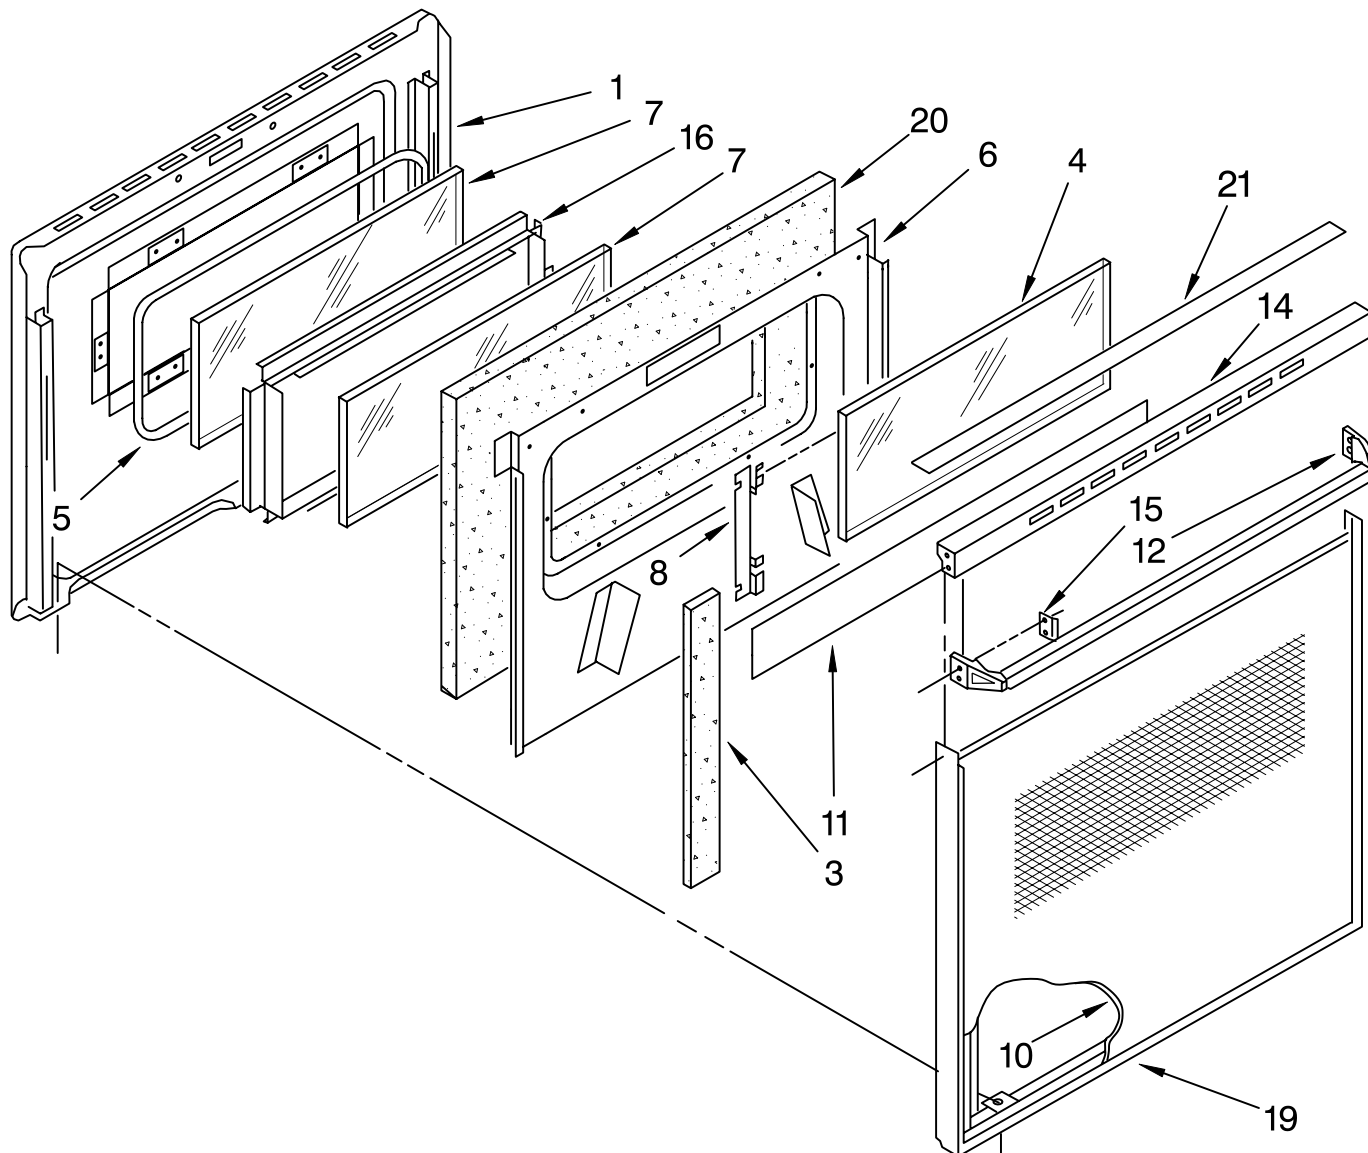

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172218	Liner, Door
	3149333	Screw (5)
3	3148441	Seal, Flange (2)
4	3169202	Glass, Clear
	3185647	Screw (4)
5	3148183	Seal, Door
6	3148159	Retainer,
	4173601	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

7	3169203	Glass, Inner & Outer
8	3188720	Retainer, Glass (2)
10		Glass, Panel
	3188052	Black
	3188050	White
11	3188706	Foil, Door
12		Handle, Door
	3186524	Black
	3186525	White
	3149253	Screw, Black
	3188403	Screw, White


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

14		Top, Door
	3148223	Black Model
	3149355	White Model
15	3148282	Clip, Mtg. (2)
16	3148234	Frame, Inner
	3185647	Screw (6)
19		Frame, Panel
	3171530	Black Model
	3187920	White Model
20	3147951	Insulation, Door
21		Cap, Top
	3181366	Black Model
	3181367	White Model

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

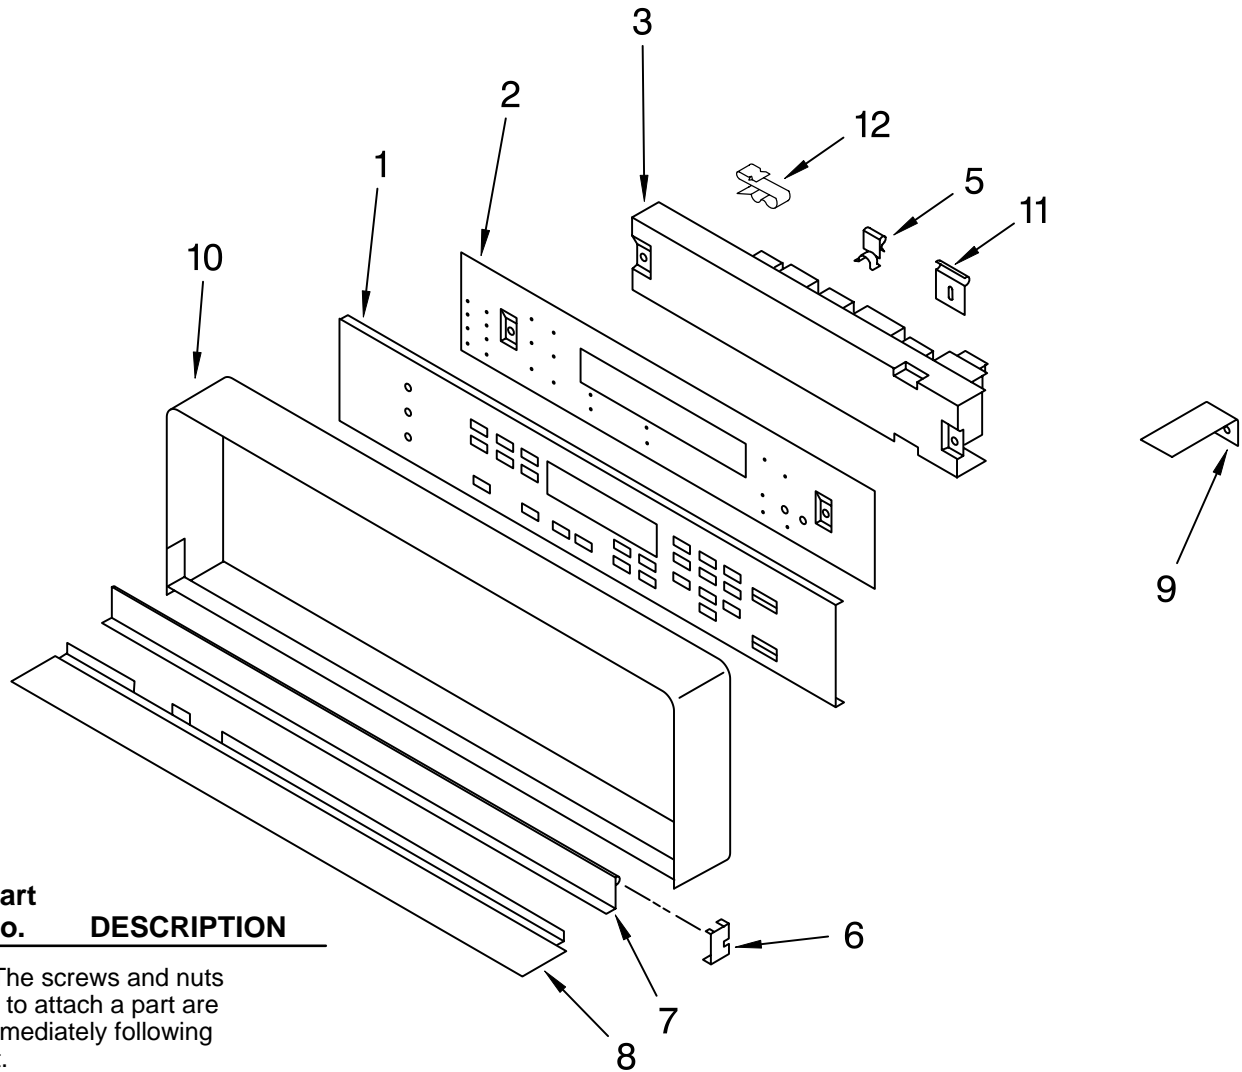

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------



NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4454376	Membrane, Switch Black
	4454377	White
2	3181889	Bracket, Mounting Switch Membrane
3	3181704	Microcomputer
	3148443	Screw
5	3182985	Clip, Retainer (3)
6	3182162	Hinge, Door (2)
7		Door, Latch Handle
	3182152	Black
	3182155	White
	3179847	Screw (2)
8	3183703	Trim, Panel
9	3185424	Bracket (2)
	3182939	Screw (2)
10		Frame, Control Panel
	3187948	Black Model
	3187949	White Model
11	3184567	Clip, Control Frame
	3148443	Screw
12	313570	Clip, Tube

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


WIRING HARNESS PARTS

For Model: KEBI200BBL2, KEBI200BWH2
(BLACK) (WHITE)

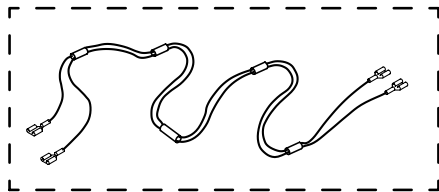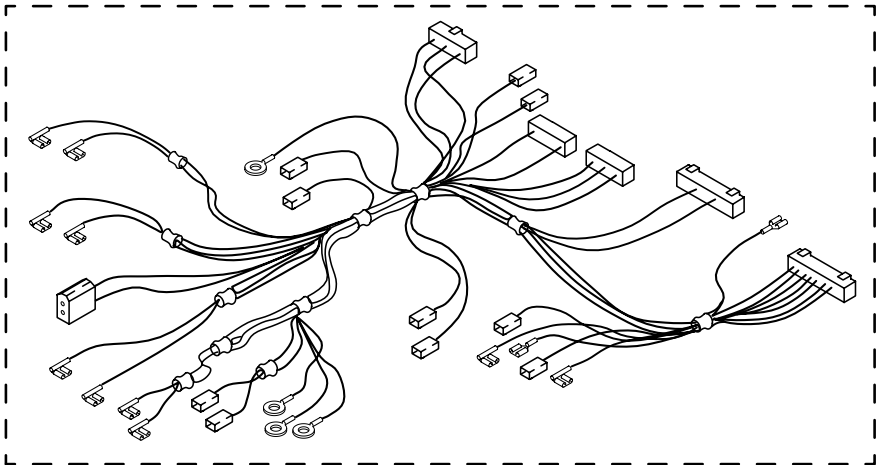

3

1

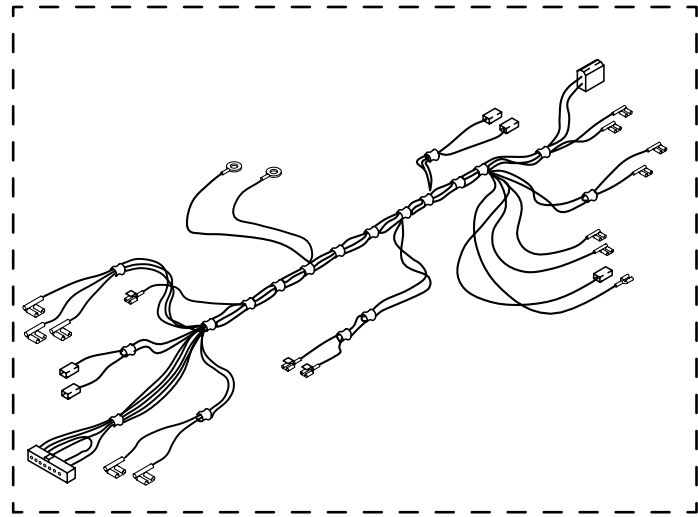

2

Illus. No.	Part No.	DESCRIPTION
1	3185968	Harness, Wire Upper Oven
2	3185985	Harness, Wire Lower Oven
3	3183751	Wire Harness Lower Oven Light
	246132	Screw
4	313438	Clip, Harness
	254225	Screw
5	98997	Clip



4



5

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST